

PHONE HOLDER INSTALLATION

STEP 1.


Hold the phone holder in your left hand with the small tab cutout pointing up.



STEP 2.

Place tabs of clamp inside the slots of phone holder in Step 1.

Tabs can be oriented up or down.

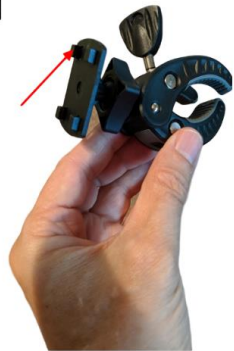

STEP 3.

You will notice that the bottom of the tab piece is raised up a little. This is normal.

Take both thumbs and push up on the back of the tab piece. You should hear and feel it click into place.

